 


Gazebo



Assembly Instructions

1) Stretch out the gazebo frame in the area where you plan on displaying it. With two people pull from opposite legs. Before it is fully stretched out put the canopy on top of the frame, ensuring it is correctly aligned. Once in place, continue opening out the frame until the canopy is taut around the frame.

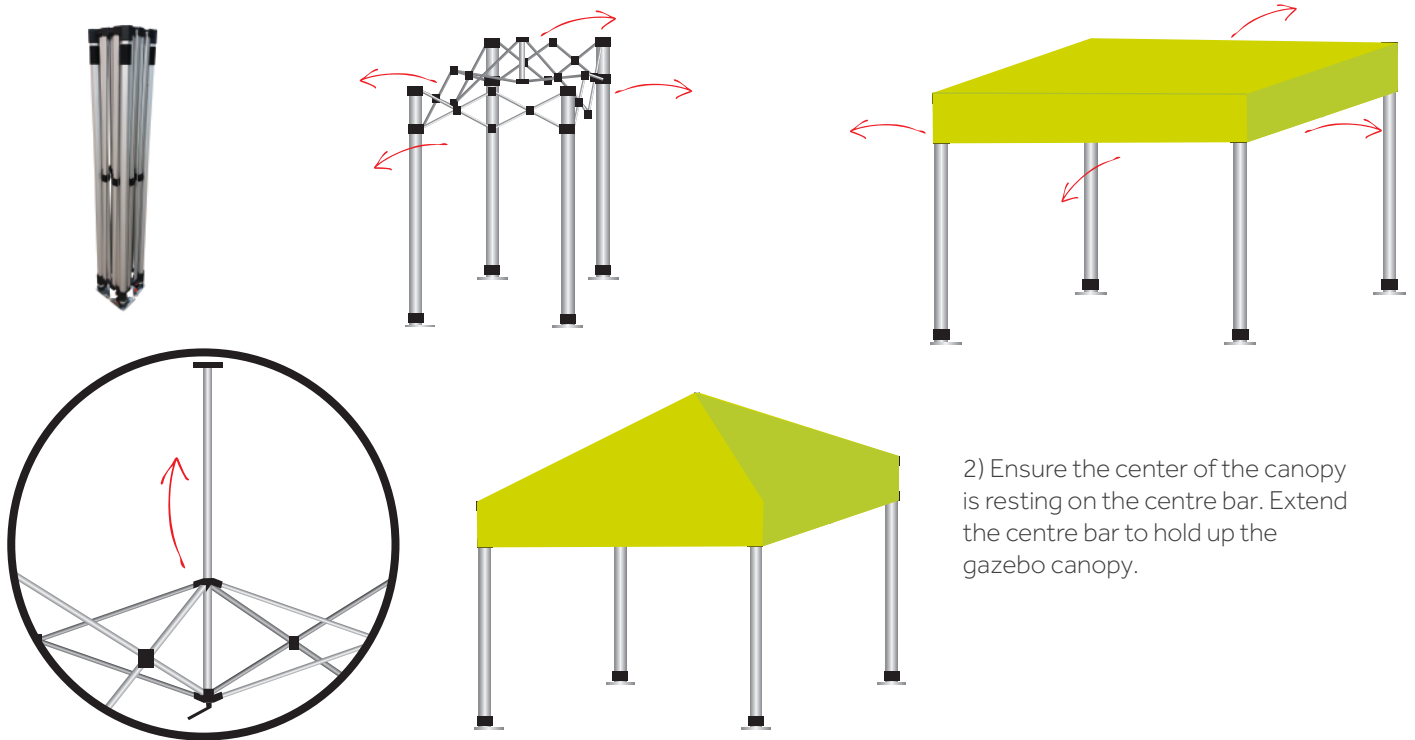

2) Ensure the center of the canopy is resting on the centre bar. Extend the centre bar to hold up the gazebo canopy.

3) Extend the legs, by lifting two adjacent legs at a time whilst standing on the feet of the gazebo. Press the red trigger and pull the legs up until they reach your desired display height. Ensure they click into place.
We recommend raising the legs gradually, swapping sides each time, to ensure your gazebo is raised evenly.

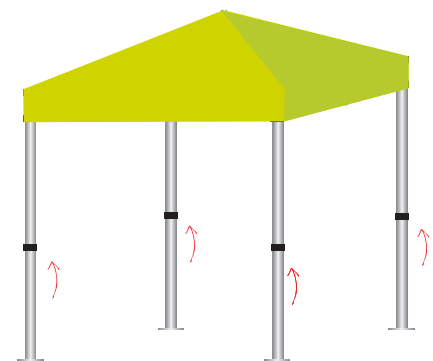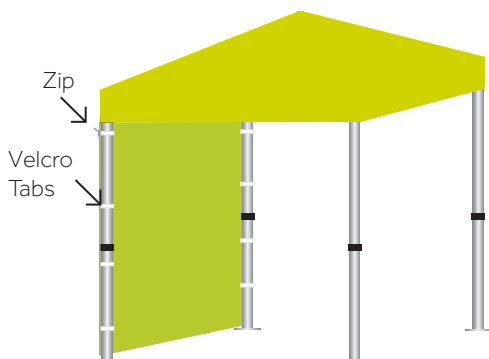

4) From inside the gazebo attach the walls (if ordered). Attach the velcro strip at the top of the wall to the Velcro strip on the inside of the canopy edge. Wrap the Velcro tabs around the gazebo legs. If installing more than one wall connect each panel together with the zips at the sides of each wall.

5) When packing away, leave the roof on the frame and collapse it down with the frame. Put the frame and the roof in the main section of the gazebo bag. The walls can be folded neatly and be placed into the side pockets of the bag.